

Hailo shaft cover types 3 + 4

Stainless steel shaft cover


Circular design, surface water proof, internal anchor plates, concealed hinges. self-locking latch, opening assisted by gas-pressurised spring, locking mechanism can be opened in an emergency from below

Type HS3 = normal

Type HS4 = reinforced (thickness of cover = 4mm)

Standard sizes:

- Ø 600mm
- Ø 700mm
- Ø 800mm
- Ø 1000mm
- Ø 1200mm

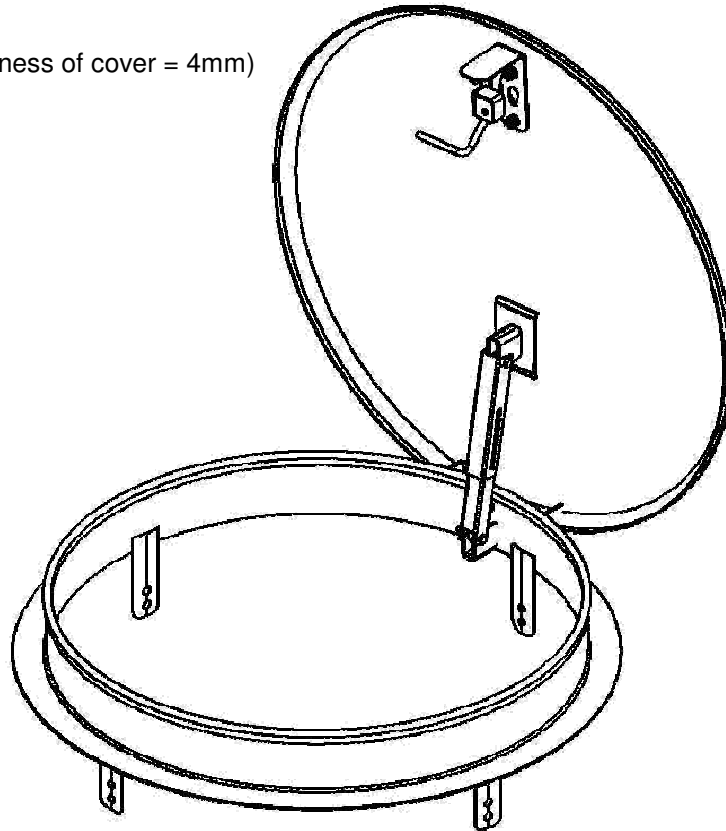

Instructions for assembly:

- The shaft cover needs to be sealed by the customer, for example, using sealing strip between frame and cover.
- Hailo shaft covers types HS3 & 4 are secured to the structure, for example, with plastic wedge anchors and DIN 571 hexagonal bolts as well as DIN 125 washers from the interior through the anchor plates.

Instructions for use:

- Before opening the cover, first remove the brass cap using the operator key.
- If required, the brass fastener insert and profile cylinder, which protects the shaft cover from unauthorised access, are to be removed at this point.
- The operator key is then inserted into the lock collar and turned 90° anti-clockwise.
By pulling gently at the operator key, the locking mechanism opens and the cover can now be opened.
- The latch which stops the cover from accidental closing and re-opening engages automatically during the opening procedure.
- Before closing the cover, ensure that the latch has been released and is pulled forward slightly.
- The locking mechanism is automatic, i.e. the cover is locked again automatically when closed.